

VI.5.3D-RWWARN PROGRAM FCST HCL TECHNIQUE RWWARN

Purpose

Technique RWWARN sets whether warning messages will be printed from the read/write subroutines.

Valid values are NO (0) and YES (1).

The Global default value is YES (1).

This Technique is Universal.

Form of Input

RWWARN(integer)

where integer is 1 or 0 specifying whether or not to print warning messages from the read/write subroutines

Example

RWWARN(0)

Warning messages from the read/write subroutines will not be printed.